APP-012: Add a Lenze VFD to AutoFlex Connect

To add a Lenze wireless VFD to your AutoFlex Connect, follow the information in this application note. For complete information and installation instructions, refer to the Lenze documentation.

What is required at the VFD

For installation

Connect **D01** and **DI4** together using a **330 Ohm resistor**. See the Lenze documentation.

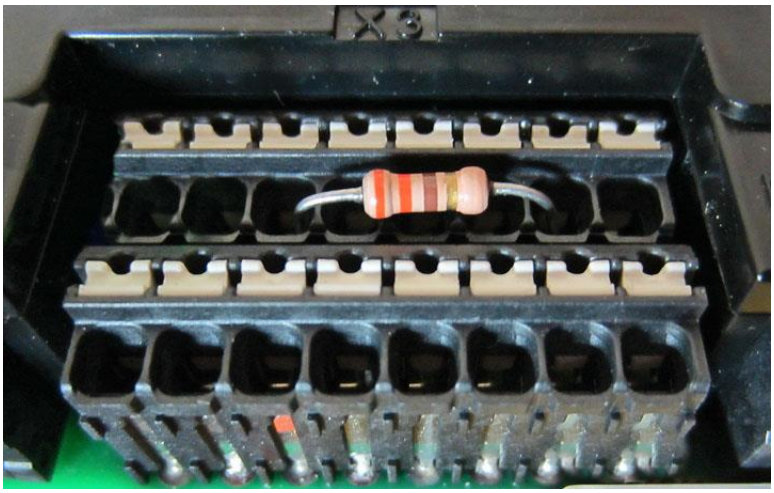

For configuration (using Lenze Easy Starter software)

WLAN settings: IP address WLAN settings: Netmask WLAN settings: Gateway	Use static addressing, not DHCP.
WLAN settings: DHCP	Disabled
WLAN settings: WLAN SSID WLAN settings: WLAN password	Must be on the same network as AutoFlex Connect.
WLAN settings: WLAN access	Enabled (WLAN on)

©Phason Inc.

What is required at AutoFlex Connect

1. Press the main menu and then Configuration.
2. Press the group the VFD will be in.
3. Press the VFD icon [ ] that is on the bottom bar.
4. Under VFD groups, enter a name for the group. Press the add icon [ ].
5. Under VFD Outputs, enter a name and the IP address of the VFD. Press the add icon.

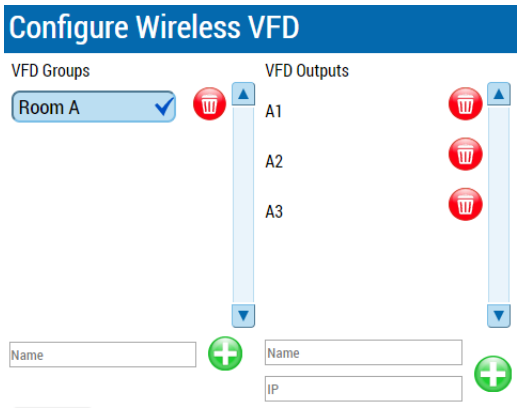

 ©Phason Inc.